

AE0309-CP4
KIT PULLER – INSERTER BUSHING
IN «LOW» FLANGE OF CP4 PUMP



AE0309-CP4

Kit consisting of:

- puller
- inserter

For inner flange bushing in CP4 pumps

Bushing spare: **BB0014-CP4** –Not in the kit – Sold individually -



AE0309-CP4

KIT PULLER – INSERTER BUSHING

IN «LOW» FLANGE OF CP4 PUMP

1. Before to go on and pull out the bushing, enlarge the hole of the flange till a diameter of 26,6mm and a depth of 5,5 mm.



DRILL THIS SIDE

DIAM. 26,6MM

DEPTH: 5,5MM

2. After you enlarged the diameter, proceed to pull out the bushing with our puller (diam. 25,5).



3. To assemble the new bushing BB0014-CP4 use our inserter. Our inserter is designed with correct height to place the bushing in the perfect position.

DRILLING THE FLANGE DOES NOT DAMAGE ITS FUNCTION